

No Power:

Check the circuit breaker mounted to the outside of the chamber, in the black lead from the power switch to the control board. If it's open there may be a problem with the brake resistors next to it (may check good but be bad).

E24~27:

Lid latch errors, section 3.7 on p 3-5 of service manual

E34:

Brake resistors may check good but be bad. Also check motor windings per p 2-8 in service manual.

Lid latch motor windings $\sim 5\Omega$

Lid microswitch 20VDC on Cn XA